


QS432 DVR Connections


FIRST 16 CAMERA I/Ps IF USING VIEWER HD CABLES

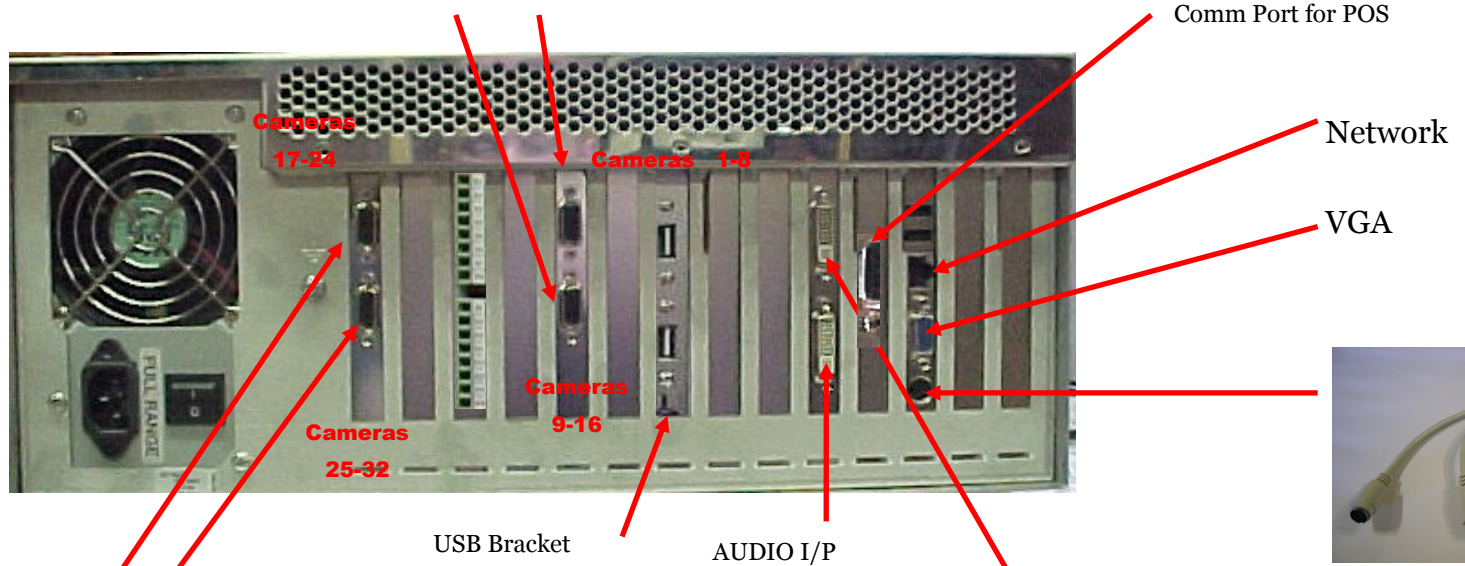

SECOND 16 CAMERA I/P
USING 15 WAY D TYPE TO
BNC-2 SUPPLIED OR HD
CABLES FROM VIEWER



Keyboard and mouse splitter cable

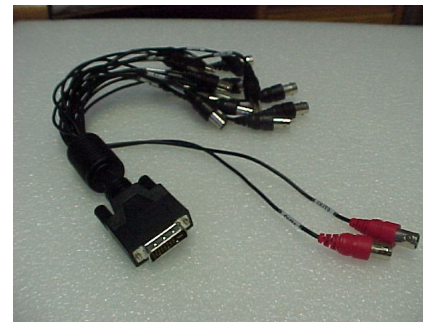

1 x 16 BNC to DVI. The red spot monitor outputs can be used for output to the lectern.